

BOUNDLESS

CEX

MANUAL



# CFX+



## SCAN QR

Above to download manual in

### SPANISH

Escanear QR para español

### FRENCH

Scannez QR pour le français

### GERMAN

QR scannen für Deutsch



# Table of Contents

<b>Getting Started</b> .....	03
- Power On/ Off.....	03
- Menu Screen .....	03
<b>Controls</b> .....	03
- Main Menu Controls.....	03
- Selecting an Option.....	04
- Preset Mode .....	04
- Precision Mode .....	05
- Start/Heating Screen .....	06
- Stand by Screen .....	07
<b>Features</b> .....	08
- Magnetic Mouthpiece .....	08
- Zirconia Cooling Path .....	08
- On-Board Stir Tool .....	08
- Charging .....	09
- Cleaning .....	09
<b>Warnings &amp; Disclaimers</b> .....	10
- Isopropyl Alcohol Warning ....	10
- Recommended Cool Down ...	10
- Choking Hazard .....	10
- Handling the CFX+ .....	11
<b>Warranty</b> .....	12
<b>Contact</b> .....	12

# Getting Started

## Power On/Off

Hold both buttons for 3 seconds. The CFX+ will vibrate when turned on/off.

## Menu Screen

The Options to select on the screen are as follows:

Start ( Select this option to enter the heating screen and start the session)



Temperature Units (C°/F°)



Session Time: (2 minutes, 4 minutes, 6 minutes, 8 minutes)



# Getting Started

## Menu Screen

Screen Brightness (Full Brightness)



Low Brightness



Precision Mode



Preset Mode : P2 - Default Setting



<u>340F°</u> 171C°	<u>370F°</u> 188C°	<u>400F°</u> 204C°	<u>430F°</u> 221C°

# Controls

## Main Menu Controls


Use up and down to cycle through the menu. Click both buttons at the same time to select or change a setting.

## Preset Mode

Preset Mode will start the session at one of the 4 presets.

Highlight one of the presets on the menu and select "Start" to begin the session at the chosen preset.


\*See Preset temperature table. The default preset is set to P2 (370F).

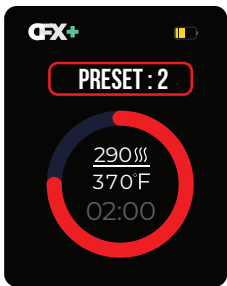

# Controls

## Precision Mode

In Precision Mode (☞), the temperature can be adjusted by single digits up to 430F/221C. Cycle through the options of the Preset/Precision Mode selection until the Precision Mode icon (☞) is highlighted. Once the Precision Mode option is highlighted, select start to begin.

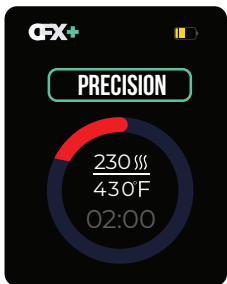

# Controls

## Start/Heating Screen

Select Start to begin the session.



\*Label start temp in the chart

## Stand By Screen

Once the session is completed, the CFX+ will enter into "Stand By" mode.






# Features

## Magnetic Mouthpiece

An upgraded magnetic mouthpiece is featured in the CFX+. The magnetic mouthpiece sits on top of the ceramic herb chamber and can be removed by lifting up on the mouthpiece lip near the air path exit.

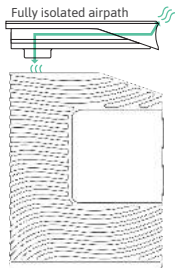

# Features

## On-Board Stir Tool

The onboard Boundless stir tool is located underneath the mouthpiece in the silicone mouthpiece screen holder. This tool can be used to stir your herb during the session and help with emptying the herb once the session is over.

## Charging

The CFX+ features USB - C charging. It is recommended to use the provided USB - C cable .

Average of 12 - 4 minute sessions on a full battery.

Recharges in an average of 45 minutes.

USB-C  
Charging Port




# Features

## Cleaning

It is recommended to rinse with warm water then use up to 91% isopropyl alcohol to clean the mouthpiece top piece, zirconia cooling path, and mouthpiece screen. Rinse with warm water again thoroughly then air-dry overnight.

For the silicone mouthpiece screen holder, it is recommended to clean with warm to hot water then air-dry overnight. The chamber can be cleaned with isopropyl alcohol and cotton swabs. Be sure to hold the unit upside when cleaning to avoid any liquid falling into the unit. Before using the CFX+ after cleaning, perform a few burn-off sessions to ensure that the unit is sterilized.

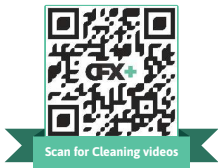

# Warnings & Disclaimers

## Recommended Cool Down

It is recommended to let the CFX+ cool down after 2 consecutive sessions to ensure a prolonged lifespan of the unit.

## Isopropyl Alcohol Warning

Be advised when using isopropyl alcohol to clean your CFX+. It is recommended to only use isopropyl alcohol for cleaning the chamber or the zirconia cooling path and zirconia holder.

## Choking Hazard

The CFX+ contains small parts which may be a choking hazard to small children. Keep the device away from children.

# Warnings & Disclaimers

## Handling the CFX+

- Do not drop, deform, bend, crush, puncture, incinerate, microwave, shred, paint, or insert foreign objects into a CFX+ or try to repair or modify the CFX+ yourself.
- Do not clean the CFX+ other than instructed by Boundless Technology.
- Do not use a damaged CFX+ charger or non-Boundless Technology charger. Incompatible chargers may carry different voltages which may be a fire hazard.
- Use caution when handling the CFX+ as the heating chamber gets very hot. Refrain from direct contact with the heating chamber when hot or heating up.
- Do not leave the device unattended when it is powered on or while the device is still hot.
- Do not leave in extreme temperatures.
- Do not charge on carpet or bare rug.

## 3-Year Limited Warranty

Boundless Technology warrants this CFX+ branded device against defects in materials and workmanship under normal use for a period of three (3) years from the original date of retail purchase by the original end-user. The original bill of sale is required to redeem the warranty.

For more information or to process a warranty claim please visit: [boundlesstechnology.com/Warranty](http://boundlesstechnology.com/Warranty)

## We Are Happy To Help!

### Email Us

[info@bndlstech.com](mailto:info@bndlstech.com)

For Replacement Parts,  
Tutorials, & More

[boundlesstechnology.com/cfx+](http://boundlesstechnology.com/cfx+)

Online Retail Store

[boundlesstechnology.com](http://boundlesstechnology.com)

Follow Our Socials



@BNDLSTECH

# CFX+



[BOUNDLESSTECHNOLOGY.COM/CFX+](https://boundlesstechnology.com/cfx+)



[MagicVaporizers](#) – Europe's Best Shop for Vaporizers

- Lowest prices
- Fastest shipping
- Most trusted warranty

